 
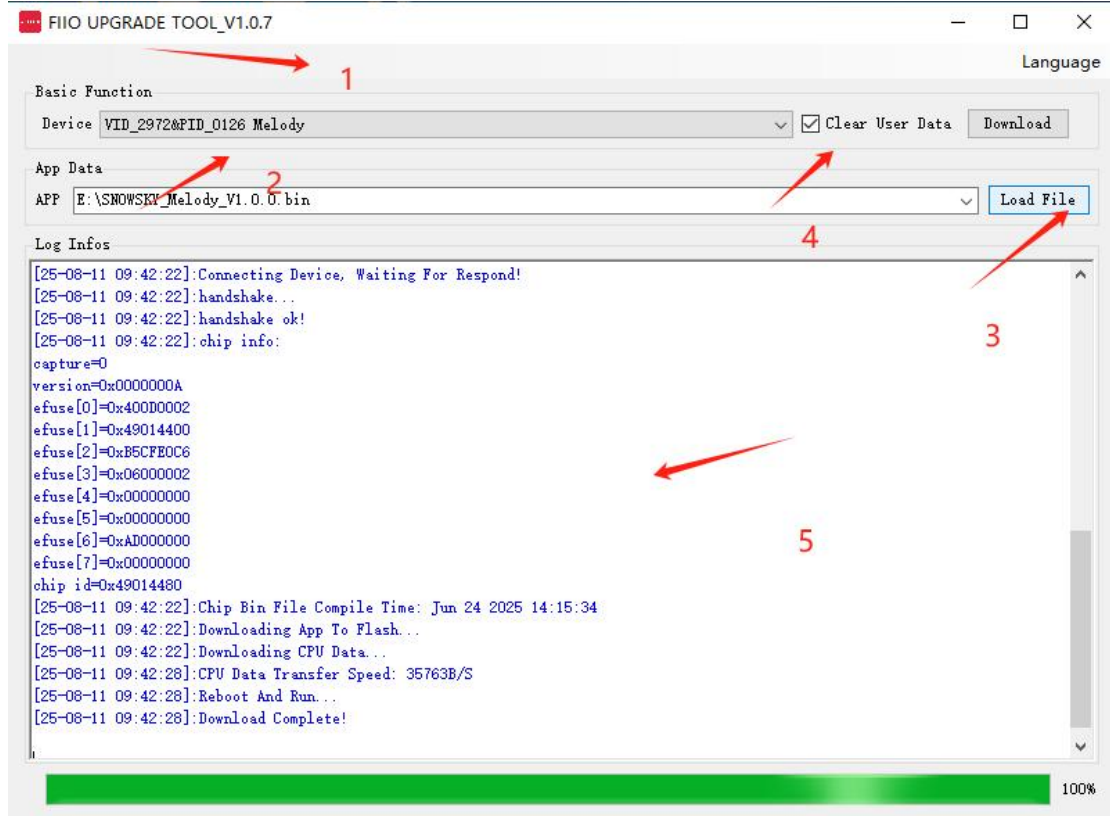 


Meldoy 固件升级指导/ Melody Firmware Upgrade Instruction

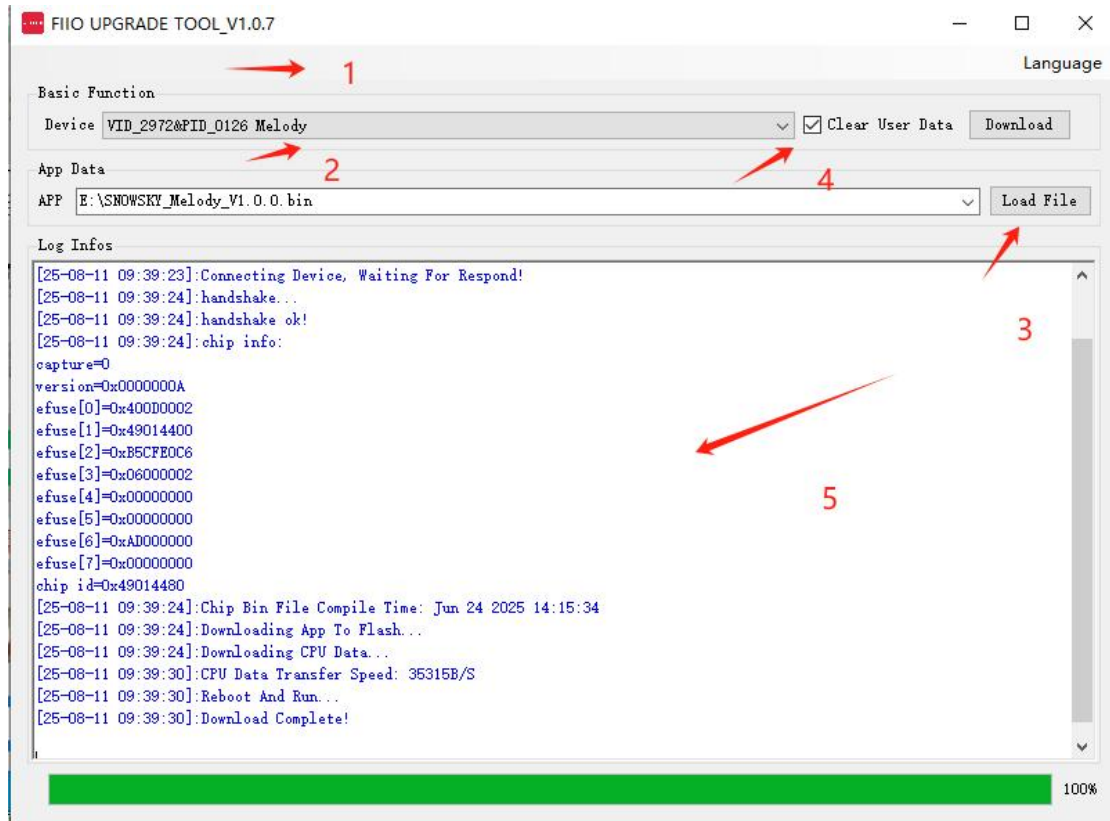

升级指导:

1. 打开升级工具，将 Melody 通过 USB 口接入 Windows 电脑（升级工具不支持 MAC 系统电脑）
2. 选择设备名为(VID_2972&PID_0126 Melody)或(VID_2972&PID_0126)的设备
3. 点击载入，选择对应的升级固件
4. 清除用户数据可自己选择,如选择不勾选，新固件会保留旧固件的已设置项
5. 点击升级，待工具下方进度条呈绿色并显示 100%的状态， 表示升级成功

Upgrade Instructions:

 
1. Open the upgrade tool and connect the Melody to the Windows PC through the USB port (the upgrade tool cannot be used on the MAC).
2. Select the device named VID_2972-PID_0126 Melody or VID_2972-PID_0126.
3. Click Load File and select the corresponding upgrade firmware.
4. Whether to clear user data is up to you. If you choose not to, the new firmware will retain the Settings of the previous one.
5. Click Upgrade. When the progress bar below the tool is green and shows 100%, the upgrade is successful.

注意事项:


1. 烧录成功前，请保持 USB 正常连接，不要拔插以及晃动，有可能接触不良导致升级失败
2. 如果升级失败，可重新选择设备进行升级，这个时候设备名称会变成（VID 0666&PID_888 Melody）或（VID 0666&PID_0888），后续的升级操作一致




Notes:

1. Before the upgrade is successful, please keep the USB connection normal. Please do not plug and shake it, which may cause poor contact to upgrade failure.
2. If the upgrade fails, please use another device for the upgrade. In this case, the device name will change to VID 0666&PID_888 Melody or VID 0666&PID_0888. The follow-up upgrade operations are the same.

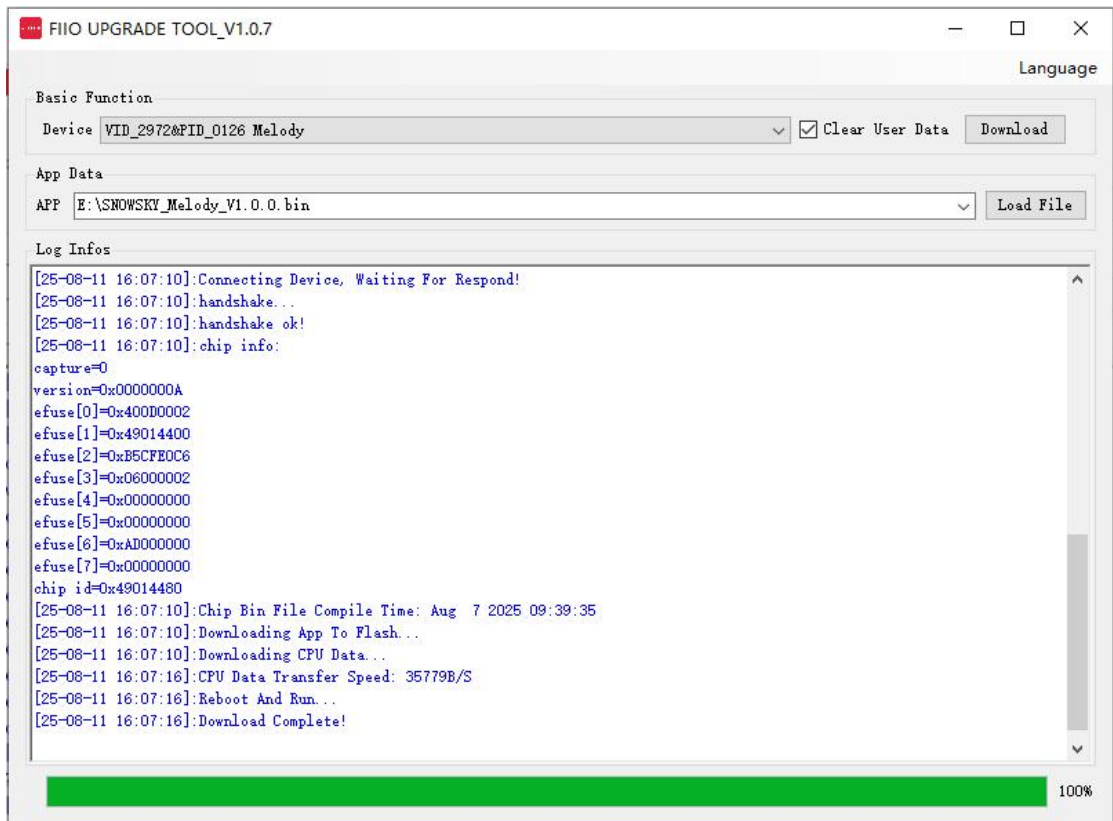

    网页版/Web Version: <https://fiocontrol.fio.com/>

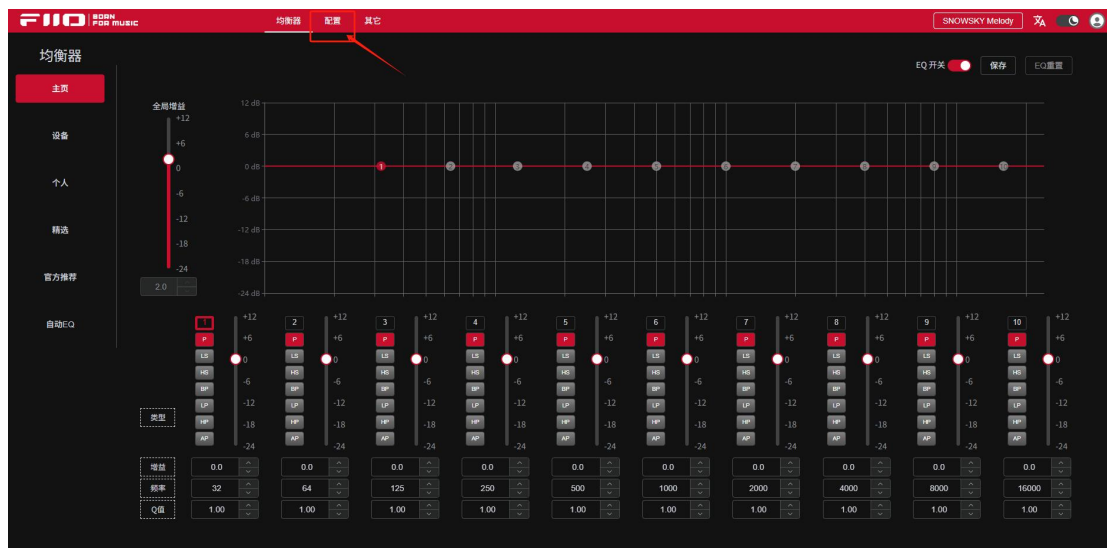

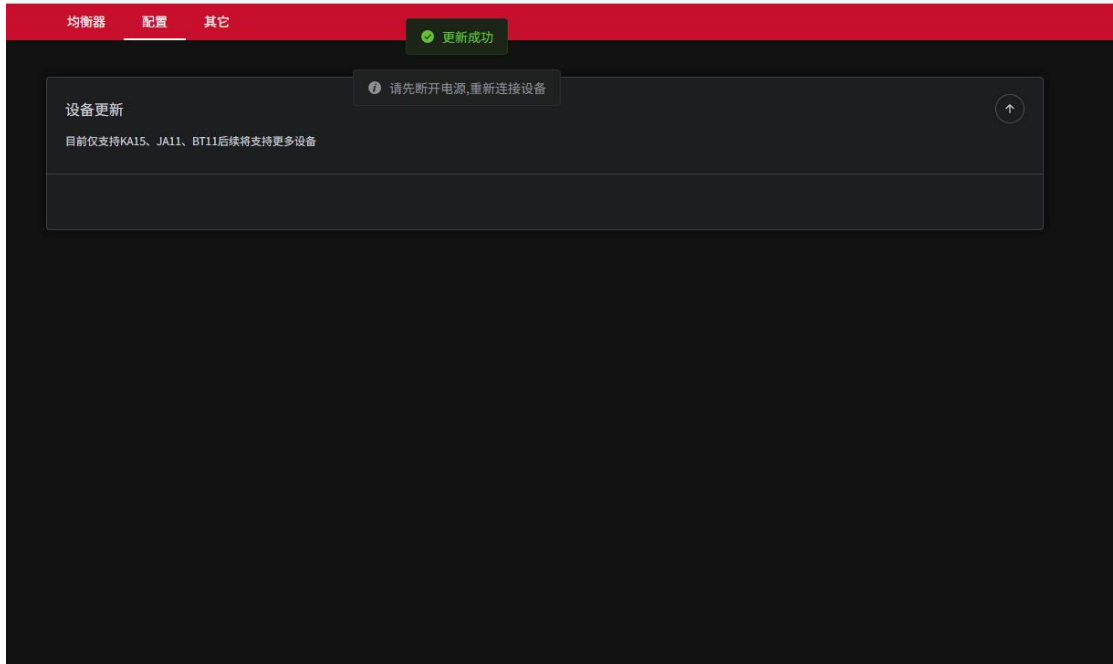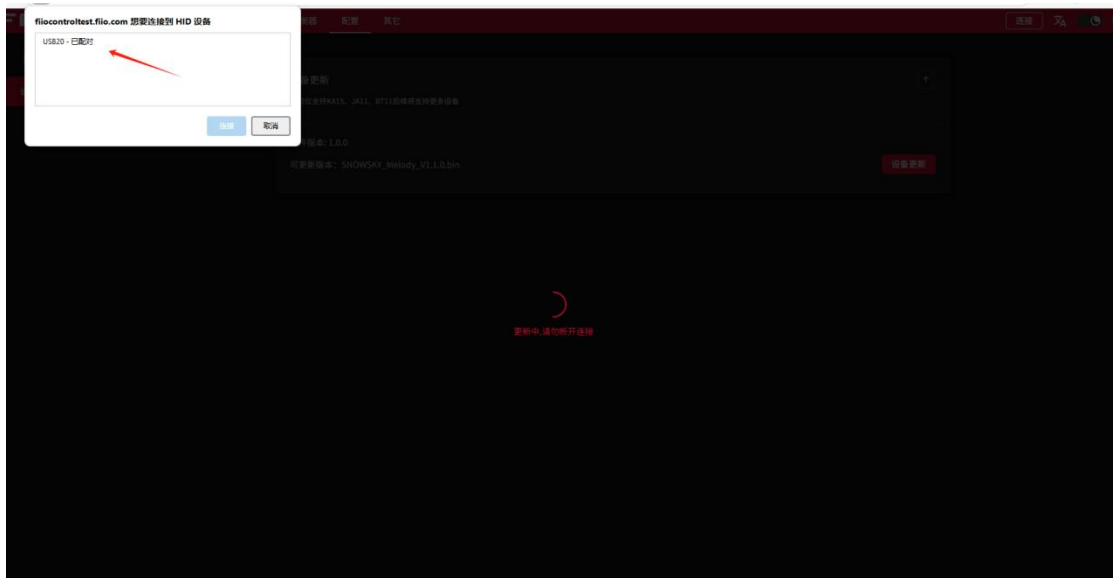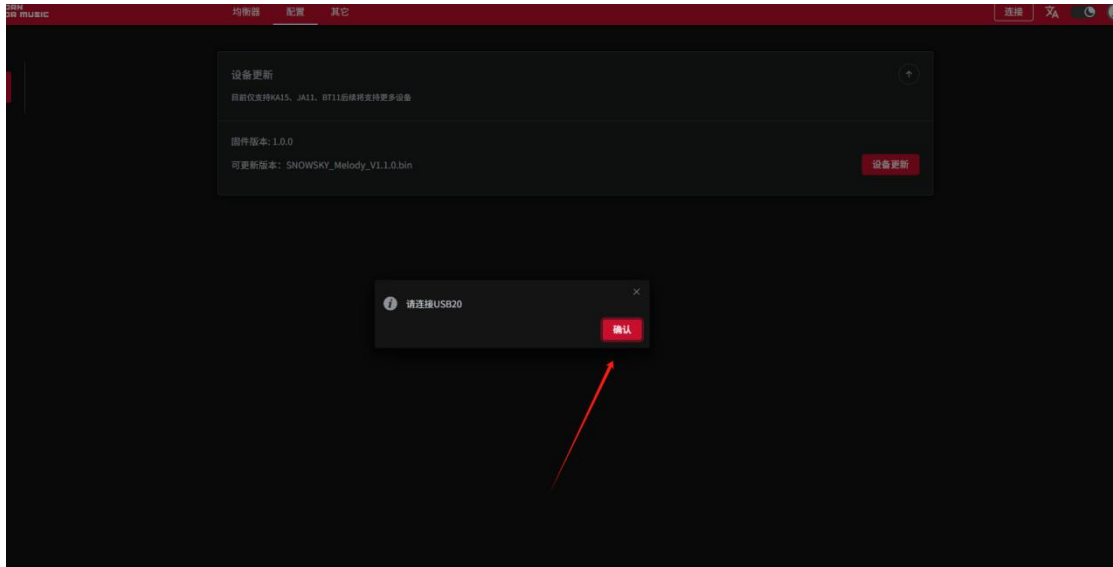

升级指导：

1. 用支持 Web HID API 的浏览器打开网页版，如 Chrome、Edge、Opera 等
2. 将 Melody 连接至 Windows/MAC 等电脑的 USB 口
3. 点击搜索设备并连接至 SNOWSKY Melody
4. 点击检查更新，会自动跳出最新的固件
5. 点击升级，页面会跳出需要连接至 USB20 的提示窗口，此时点击确定后并在页面左选择 USB20 设备并连接，固件自动进入升级状态
6. 自动升级中，当升级完成，页面会跳出更新成功的提示
7. 途中如果升级失败，会跳出对应的提示，重新选择 USB20 设备再次进行升级即可

Upgrade Instructions:

1. Visit the web version with a browser that supports Web HID API, such as Chrome, Edge, and Opera.
2. Connect the Melody to the USB port of a Windows/MAC computer.
3. Click Search Device and connect to the SNOWSKY Melody.
4. Click Check Update. The latest firmware will appear automatically.
5. Click Update. There will be a prompt saying that you need to connect to the USB20. Click OK, and select the USB20 device on the left side of the page for connection. The firmware will start to update automatically.
6. During the automatic update, a prompt saying Update Success will display when it is completed.
7. If the update fails during the process, a corresponding prompt will be displayed. Select the USB20 device and try to update it again.